


2nd Monitor Customer Facing Screen

The 2nd screen we usually supply connects to the back of the Posiflex terminal. It connects via a small USB cable it is supplied with and there is a panel you can remove on the top left on the back of the Posiflex which has a USB socket it can connect to.



The machine with the display needs a folder in the winci folder called images that has at least 2 .JPG files in it.

It needs a space and then /EF on the command line after the wcmاني.exe on the server

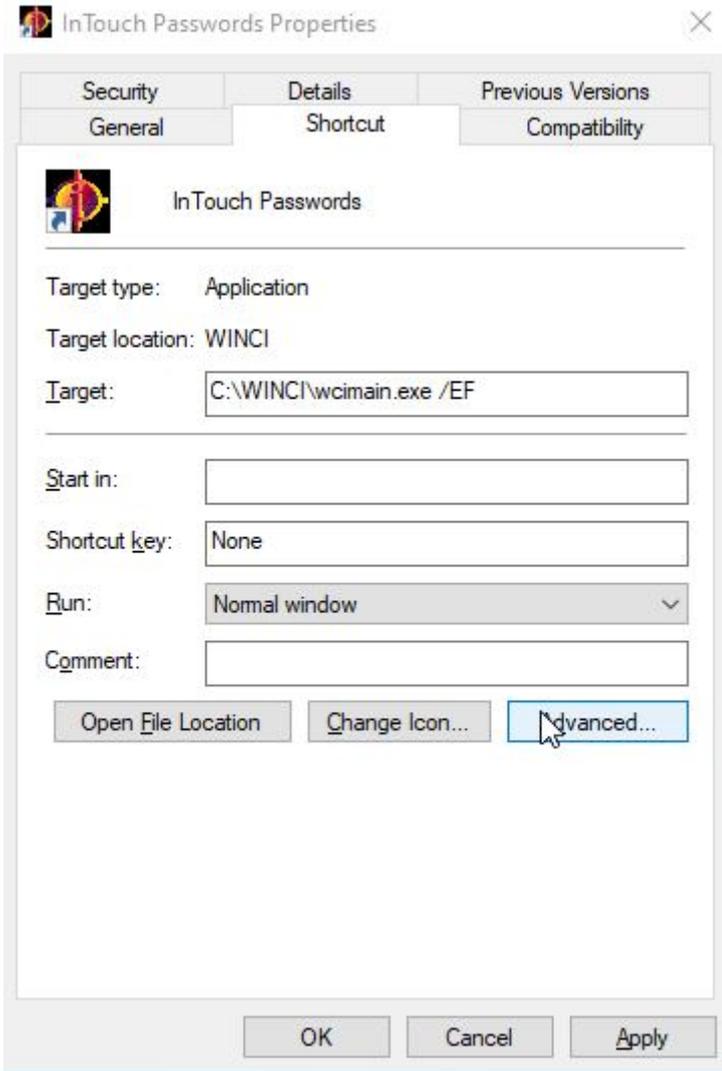

or in the intouch.bat file if it is a terminal

The image shows a Notepad window titled "*INTOUCH - Notepad". The text content is a batch script for file synchronization:

```
@ECHO OFF
: TOP
IF EXIST \\server\c\winci\wcmmain.exe (xcopy \\server\c\winci\data\*. * c:\winci\data\ /D /Y) ELSE GOTO TOP
IF EXIST \\server\c\winci\wcmmain.exe (xcopy \\server\c\winci\audit\*. * c:\winci\audit\ /D /Y) ELSE GOTO TOP
IF EXIST \\server\c\winci\wcmmain.exe (\\server\c\winci\wcmmain.exe /EF) ELSE GOTO TOP
|
```

The status bar at the bottom indicates "Ln 6, Col 1", "100%", "Windows (CRLF)", and "UTF-8".

Below is a link to the Posiflex site to the drivers for the screen we normally supply.

<https://www.posiflex.com/en-global/product/index/POS-Monitor/Attachment/LM-6810U#download>

When the driver is installed there should be 2 screens showing in the display settings and this screen needs to be to the left of the main screen.

There is a power button on the back of the small screen if it doesn't seem to work.

It should just display whatever is in the images folder as a slideshow and if you go into an order it should display the receipt being built up on the right like it does on the order screen.

Revision #2

Created Thu, Feb 24, 2022 5:13 PM by [Simon](#)

Updated Wed, May 17, 2023 9:59 AM by [Simon](#)